


# A. Retaining Walls

PYZIQUE is not designed for walls over 3 feet of height and with no surcharge. For PYZIQUE walls of any height it is critical to use retaining wall construction techniques as given below and techniques that are common to engineered retaining walls. Retaining walls of any height, even one foot tall, can fail if not installed properly. All retaining walls require that surface water, rain, sprinklers, etc., be controlled behind the wall and drained away at the surface. Successful PYZIQUE retaining walls require proper retaining wall installation techniques including; adequate footing strength, rock placed behind the wall with a drain tube for drainage of fill water from behind the stones, proper compaction of the backfill soil and other requirements of the PYZIQUE system, such as proper set-back between the layers of stones.



Excavate a trench approximately 14 inches wide. Follow this table for trench depth and thickness of the compactible rock leveling base.

Wall Height	Trench Depth	Compactible Rock
3'	6"	3"
2'	4"	2"
1'	2"	1"

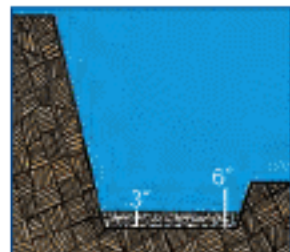


## The First Course




Place the first layer of Pyzique stones smooth side down on the prepared foundation. Use a level in all directions and use a string line to verify straightness. Serpentine walls may be built. Be certain the base course is level and stones lay flat. For micro leveling and to help the stones lay flat use small handfuls of sand to level and stabilize the first course.

## Setback Alignment

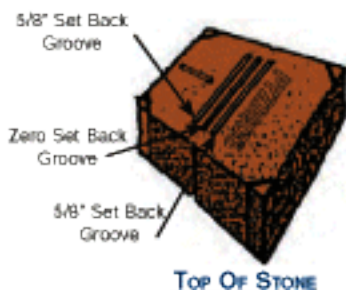

Set the center side alignment groove directly above the backmost 5/8" set back groove of the stones in the next lower layer. See stones at top of this page. Use this visual alignment for each successive layer of stones. Mat material can be used to filter soil fines that may migrate into your clean granular fill. A flexible drain tube is a competent way to assure drainage from behind your wall. As successive layers are set, stagger the face seams of the stones for interlocking wall strength.

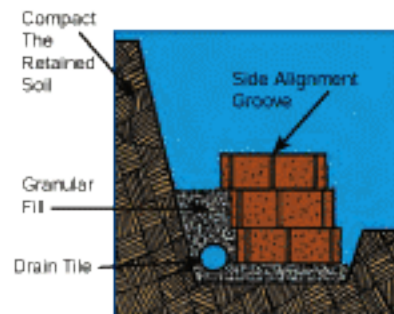

## Top Cap Layer



The normal bottom of each Pyzique stone is smooth. Place the bottom up for your cap layer. To avoid vandalism, use a paver grade glue to secure the cap layer to the layer below it. The cap layer may be set 1" forward for a cap layer overhang.





# PYZIQU

## B. Building Steps

1. Excavate to highly compacted soil. Allow for a minimum of 2" of compacted rock material.



2. Starting first step.




3. Starting step up.



4. Full steps. Glue stones.




5. Finished Steps

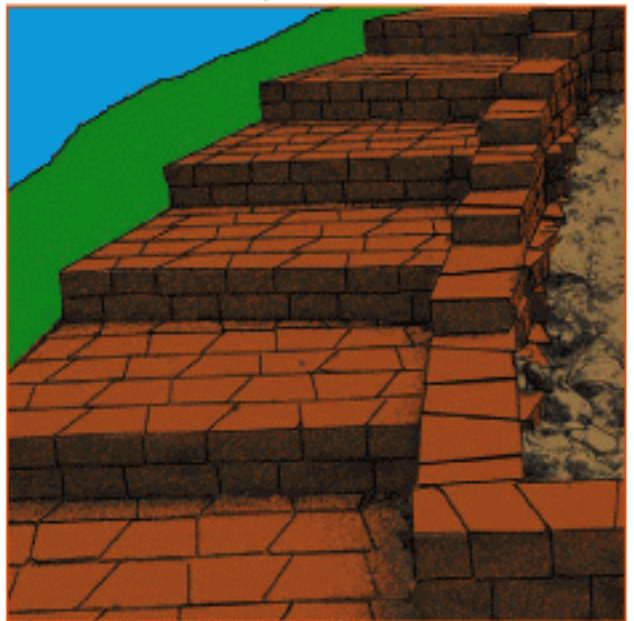

## C. Free Standing Stone Fence, Patio Barriers & Sitting Walls

Pyzique's patented double splitface allows you to build stone fences, patio barriers and sitting walls with both sides showing a beautiful stone finish. Pyzique projects are simple to build and inexpensive.

These projects are built straight up using the zero set back groove (see Pyzique stone Section A). Footings must be highly compacted aggregate or solid reinforced concrete. The use of paver adhesive between the upper layers is necessary. Stone fences must be built plumb.


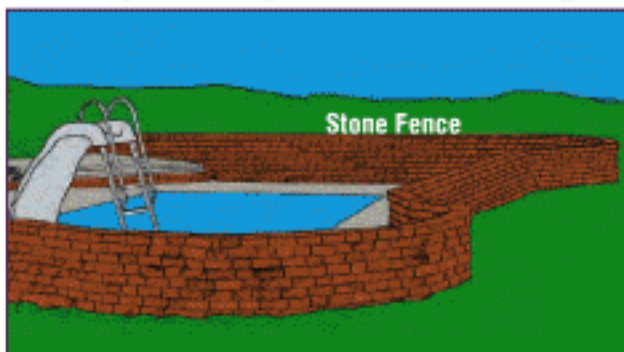


**PYZIQUE 573-230-4974 PYZIQUE**

SEE MORE AT [WWW.PYZIQUE.COM](http://WWW.PYZIQUE.COM)

## D. Borders

Split stones across middle and lay as border stones.

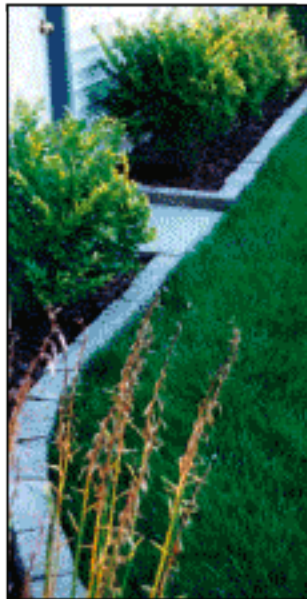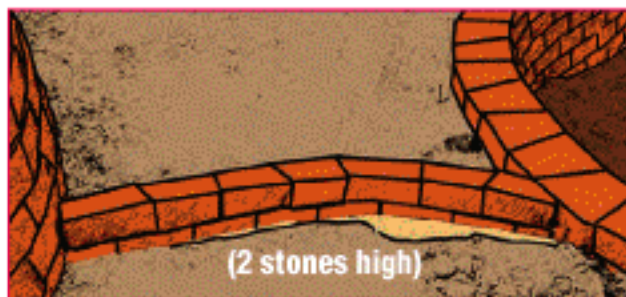

## E. Path & Paver Borders

Stand Pyzique stones upright. Glue stone to stone.

